


TACHTROL® 20 Panel Mount Adapter Installation Instructions

1. Apply the panel gasket (*supplied with Tachometer*) over the **TACHTROL® 20** meter.
2. Insert the **TACHTROL® 20** meter through the mounting plate.
3. Apply the panel gasket (*supplied with the adapter kit*) over the **TACHTROL® 20** meter behind the mounting plate.
4. Insert the **TACHTROL® 20** meter with mounting plate and gaskets into the front of the existing **Tachtrol 2** meter hole cut-out. Slide the adapter plate over the rear of the **TACHTROL® 20** meter.
5. Slide the panel latch (*supplied with the Tachometer*) over the rear of the **TACHTROL® 20** meter and tighten the screws.

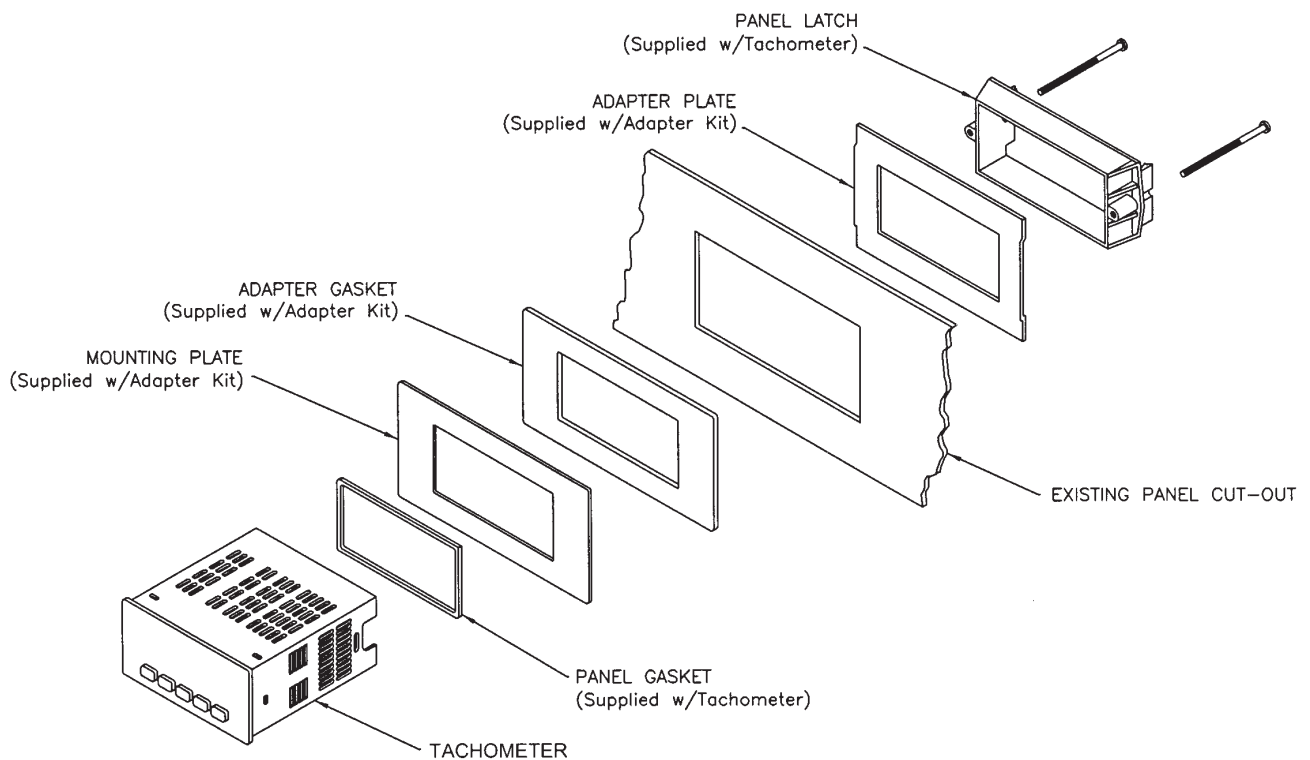

TACHTROL® 20 PANEL MOUNT ADAPTER — P/N: 675-0303-001